


Supported Papers

A large amount of information is stored in your printer as printable pages. The following pages show the **Paper Tips** printable page, which provides information on the supported papers.

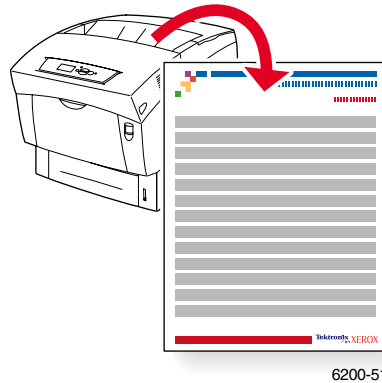

All the printable pages have this format, with color bars at the top and at the bottom of the page. Print these pages at the printer's front panel.

Accessing printable pages

Access these pages from the **Printable Pages Menu**:

1. At the front panel, scroll to the **Printable Pages Menu** using the **Down Arrow** or **Up Arrow** key and press the **OK** key.
2. Scroll to the desired printable page (such as **Print Paper Tips Page**) using the **Down Arrow** or **Up Arrow** key and press the **OK** key.

Menu Map

For a complete list of printable pages, print the Menu Map:

1. Select **Menus** on the front panel and press the **OK** key.
2. Select **Print Menu Map** and press the **OK** key.



PHASER® 6200 COLOR PRINTER

Paper Tips

The Multi-Purpose Tray (MPT) and other trays use only certain sizes and types of paper or transparencies. Follow these tables to ensure the best print quality and to avoid paper jams. For best results, use only **Xerox Phaser®** branded media as it is guaranteed to produce excellent results on your Phaser® 6200 Printer - the Phaser® 6200 and Phaser® media are *Made for Each Other.®*

⚠ Caution: Damage caused by using unsupported media is not covered by your printer's warranty.

Paper Type	Tray	Letter (8.5 x 11 in.)	Legal (8.5 x 14 in.)	Executive (7.25 x 10.5 in.)	Statement (5.5 x 8.5 in.)	US Folio (8.5 x 13 in.)	A4 (210 x 297 mm)	A5 (148 x 210 mm)	A6 (105 x 148 mm)	B5 JIS (182 x 257 mm)	ISO B5 (176 x 230 mm)	Custom
Plain Paper 64 - 90 g/m ² (17 - 24 lb Bond)	MPT	●	●	●	●	●	●	●	●	●	●	●
	Trays 1 - 3	●	●	●	●	●	●	●	●	●	●	●
Heavy Plain Paper 85 - 105 g/m ² (22 - 28 lb Bond)	MPT	●	●	●	●	●	●	●	●	●	●	●
	Trays 1 - 3	●	●	●	●	●	●	●	●	●	●	●
Transparency ⚠ Caution: Use only Phaser® 6200 Premium Transparency Film. Other transparencies may damage the printer's fuser.	MPT	●				●						
	Tray 1	●				●						
Thin Card Stock 100 - 163 g/m ² (26 - 60 lb Cover)	MPT	●	●	●	●	●	●	●	●	●	●	●
Thick Card Stock 160 - 216 g/m ² (59 - 80 lb Cover)	MPT	●	●	●	●	●	●	●	●	●	●	●
Envelope You can also use custom envelope sizes. ⚠ Caution: Use only paper envelopes. Do not use envelopes with windows or metal clasps.	MPT	#10 Commercial Envelope (4.12 x 9.5 in.) Monarch Envelope (3.87 x 7.5 in.) A7 Envelope (5.25 x 7.25 in.) Custom					DL Envelope (110 x 220 mm) C5 Envelope (162 x 229 mm) C6 Envelope (114 x 162 mm) B5 Envelope (176 x 250 mm)					
Labels ⚠ Caution: Do not print on label stock once labels have been removed.	MPT	●				●						●
Letterhead 85 - 105 g/m ² (22 - 28 lb Bond)	MPT	●	●	●	●	●	●	●	●	●	●	●
	Trays 1 - 3	●	●	●	●	●	●	●	●	●	●	●
Glossy Coated Paper 120 - 163 g/m ² (81 - 110 lb Book) ⚠ Caution: Do not use glossy ink-jet paper or non-laser glossy paper as they may cause damage to the printer's fuser.	MPT	●	●	●	●	●	●	●	●	●	●	●
Business Cards ⚠ Caution: Do not print business card media once cards have been removed.	MPT	●				●						●
Greeting Cards	MPT	●				●						●
CD/DVD Labels and CD/DVD Inserts ⚠ Caution: Do not print label or insert media once labels or inserts have been removed.	MPT	●				●						●
Photo Paper 120 - 163 g/m ² (81 - 110 lb)	MPT	●				●						●

Note: Auto duplexing is only supported from Trays 1 - 3, on 75 - 105 g/m² (20 - 28 lb Bond) media. This option is not available on the Phaser 6200B and Phaser 6200N.

Paper Type	Phaser® Branded Media	Size	Part Number
Plain Paper Heavy Plain Paper	Premium Color Printing Paper, 500 Sheets	Letter	016-1368-00
		A4	016-1369-00
Transparency	6200 Premium Transparency, 50 Sheets	Letter	016-1948-00
		A4	016-1949-00
Thin Card Stock	Premium Cover Paper, 100 Sheets	Letter	016-1823-00
		A4	016-1824-00
Label	Color Printing Labels, 30/Sheet, 100 Sheets Color Printing Labels, 14/Sheet, 100 Sheets Color Printing Labels, 6/Sheet, 100 Sheets Color Printing Labels, 8/Sheet, 100 Sheets	Letter	016-1812-00
		A4	016-1814-00
		Letter	016-1813-00
		A4	016-1815-00
Glossy Coated Paper	Glossy Coated Paper, 100 Sheets	Letter	016-1704-00
		A4	016-1705-00
Business Card	Premium Business Cards, 10/Sheet, 25 Sheets	Letter	016-1898-00
		A4	016-1899-00
Greeting Card	Premium Greeting Cards with Envelopes, 25 Sheets/Envelopes	Letter	016-1987-00
		A4	016-1988-00
CD/DVD Label	CD/DVD Labels and Inserts 20 Labels and Inserts	Letter	016-2011-00
		A4	016-2026-00
Photo Paper	Digital Photo Paper 50 Sheets	Letter	016-2009-00
		A4	016-2010-00

Paper tips

- If excessive jams occur, flip and fan the paper in the tray or install fresh paper from an unopened ream.
- Transparencies should be fanned prior to loading.
- Using non-Phaser® 6200 Premium Transparencies may cause print quality problems or damage to the fuser.
- Other size envelopes may be printed in custom mode.
- Use only paper envelopes. Do not use envelopes with windows or metal clasps.
- Label media should be fanned prior to loading.
- Do not print on label, business card or CD/DVD insert sheets once they have been removed from the printer.

Note: Damage caused by using non-supported media will not be covered under the warranty, service agreement or Total Satisfaction Guarantee.

See www.xerox.com/officeprinting/6200supplies for information on ordering supplies.