

Changing the printer's name

This procedure lets you change the printer's name. The printer's name has the following characteristics:

- Is printed on the startup and configuration pages.
 - Is used by both LocalTalk and EtherTalk to identify the printer.
 - Appears in the **Chooser**.
 - Can be up to 31 characters long, and may contain any printable characters except @ (at sign) and : (colon).
 - The default printer name is **Phaser 340**. If more than one printer with the same name appears in the same zone, numbers are appended to the names of the printers added later, for example Phaser 340-1 and Phaser 340-2.
 - A name change is persistent across printer power cycles.
1. Decompress the *Phaser 340 Utilities.sea* archive file on the Macintosh Driver and Printer Utilities diskette to a folder on your hard disk.
 2. Select the printer in the **Chooser**.
 3. Locate the *LaserWriter Utility* file in the folder on your hard disk containing decompressed utility files.
 4. Double-click on the **LaserWriter Utility** icon to start the program.
 5. Select **Name Printer** from the **Utilities** menu. The currently selected printer is listed in the dialog box.
 6. Type the new name in the edit box.
 7. Click the **Rename** button.
 8. At the confirmation dialog box, click **OK**.
 9. Open the **Chooser** to reselect the printer with its new name.