

Moving Your Printer

Before turning off the printer, wait for it to display the **Ready** message. Turn off the printer using the rear-panel **On/Off** switch.

Caution *To avoid damaging the printer, let the printer cool down for at least 30 minutes before you move it so that the ink has time to solidify.*

Before you move the printer, you'll want to complete the steps on removing the maintenance tray and locking the transit restraint.

Removing the maintenance tray

1. Remove the maintenance tray from the printer, keeping it level. Remove, empty, and replace the waste tray. Refer to the information on the maintenance tray if you need detailed instructions.
2. Place the maintenance tray in a plastic bag and seal the bag.

The maintenance tray contains drum fluid that leaks if the tray is tipped. Keep the maintenance tray level and in a sealed plastic bag while transporting it.

Caution *To avoid damaging your printer and invalidating your printer's warranty, remove the maintenance tray before moving the printer. Always store a used maintenance tray in a leak-proof package. When handling the maintenance tray, keep it level. Never ship a partially used maintenance tray. Contact with the drum fluid poses no known health risk.*


Locking the transit restraint

Refer to the following illustration while performing these steps.

1. When the printer displays the Ready message, power it down using the rear-panel On/Off switch. The printer places the print head in the locking position.

Caution *To avoid damaging the printer's internal components, always turn the printer power off and lock the transit restraint before moving the printer. Failure to do so may result in damage to the printers' internal components and may invalidate your printer's warranty.*

2. Locate the transit restraint on the right side of the printer and insert a wide flat-blade screwdriver into the transit restraint slot.

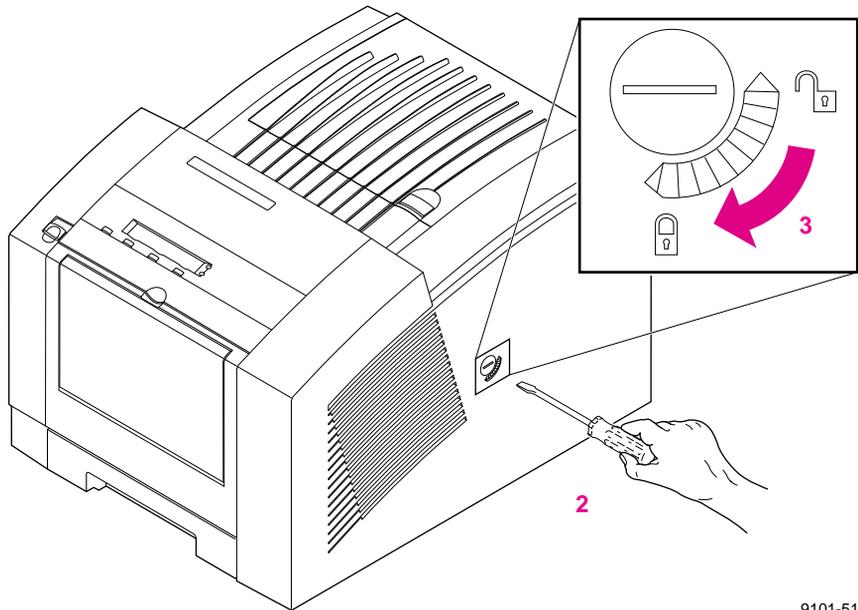

3. While pressing inward with medium pressure, turn the transit restraint slot in a *clockwise* direction to lock the print head in position. The lock button is recessed from the side of the printer when fully engaged.