

Changing the printer's name

This procedure lets you change the printer's name. The printer's name has the following characteristics:

- Is printed on the startup and configuration pages.
 - Is used by both LocalTalk and EtherTalk to identify the printer.
 - Can be up to 31 characters long, and may contain any printable characters except @ (at sign) and : (colon).
 - The default printer name is **Phaser 340**. If more than one printer with the same name appears in the same zone, numbers are appended to the names of the printers added later, for example Phaser 340-1 and Phaser 340-2.
 - A name change is persistent across printer power cycles.
1. Locate the *PRNTNAME.PS* file in the *PHSR340* directory on the Windows 3.1 Driver and Printer Utilities diskette.
 2. Copy the file to your hard disk for editing.
 3. View the *PRNTNAME.PS* file in a text editor.
 4. Edit the file to substitute a different printer name for **(My Printer Name)** in the **/PrinterName** line.

5. To send the file to the printer:

PC users: Use the DOS **COPY** command, or the **Copy** command in Windows **File Manager**, to send the file to the printer.

Workstation users: Send the file to the printer as you would any PostScript file.

Note *Some text editors add a carriage return or line feed after the last Control-D character in a file you are editing. If your computer is connected to the printer through the parallel port, or the optional serial port, the extra characters will start a new job and the printer times out after a few minutes. To avoid this, copy the **CTRLD.PS** file to the printer after you send the **PRNTNAME.PS** file.*