


Using the Installer

To install the printer's software, follow this procedure:

1. Disable virus detection software before starting the *Installer* application. Either refer to the virus detection software's documentation for instructions, or **Restart** the Macintosh while holding down the **Shift** key to start the computer with extensions off.
2. Use either the Phaser 340 diskettes or CD-ROM.
 - **Floppy diskettes:** Insert the Printer Software for the Macintosh diskette into your computer's disk drive.
 - **CD-ROM:** Insert the Phaser 340 CD-ROM into your computer's CD-ROM drive.
3. Double-click the **Phaser 340 Installer** icon. Click **Continue** until the following dialog box appears:

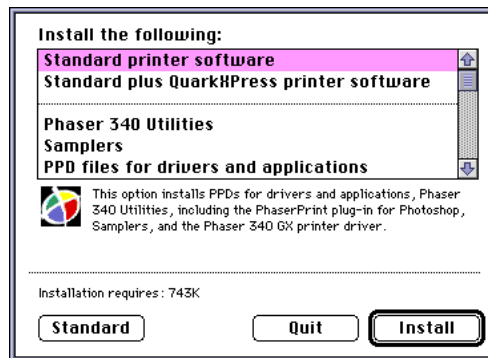

4. Select one of the standard options or select individual options; **Command-click** to select more than one item. Then click **Install**.

5. If you click the **Standard** button, the following dialog box appears. This option installs the **Standard printer software**.

