

Installing a Tektronix printer driver for Macintosh

System requirements

Note *You must have an optional Phaser Share Card installed in the printer before installing the driver.*

The Tektronix printer driver for the Macintosh requires the following hardware and software:

- An Apple Macintosh II computer (or later)
- At least 4 Mbytes of RAM
- System Software version 6.0.7, or 7.0 or later

Installing the driver

1. Make sure your Macintosh is turned on with System Software version 6.0.7, 7.0 or later, installed.
2. Insert the Macintosh Driver and Printer Utilities diskette into the disk drive. When the diskette appears on the desktop, it should be open showing the icons inside.
3. Drag the **Phaser 340** driver icon from the diskette to the **closed System Folder** icon on your Macintosh hard disk.
 - System 7.0 and higher, at the alert message, click **OK** to automatically install the driver in the *Extensions* folder.
 - System 6.0.7, the driver is installed in the *System Folder*.

4. **System 6.0.7 users:** LaserWriter 7.1.2 software is required to use the Tektronix driver with System Software 6.0.7. If you need this software, do the following steps:
 - a. Open the *Old System Items* folder on the Macintosh Driver and Printer Utilities diskette.
 - b. Drag the **Backgrounder V1.3** and **PrintMonitor V7.0** from the diskette to the **closed** *System Folder* icon on your Macintosh hard disk. At the alert message, click **OK** to automatically install these items in their proper places.
 - c. Restart your Macintosh to activate the software.
5. Store the printer driver diskette in a safe place.

Selecting the printer in the Chooser

1. Select **Chooser** from the **Apple** menu.
2. Click on the **Zone** your printer is in. See your network administrator if you have questions.
3. Click on the **Phaser 340** printer driver icon on the left side of the **Chooser**. A list appears with the printers you have connected to your Macintosh or printers that are available on a network. (If the printer driver icon does not appear, **Restart** your Macintosh, and repeat the printer driver installation procedure; also check the cable connections on your computer and printer.)
4. Click on your Phaser 340 printer in the list of printers on the right side of the **Chooser**.
5. Close the **Chooser** by clicking its close box.