

## Setting up the Phaser 350 GX driver

If you are using Apple Macintosh QuickDraw GX and System Software 7.5 or later, use the Phaser 350 GX driver to print to your Phaser 350 printer.

- The Phaser 350 GX driver works with QuickDraw GX and non-QuickDraw GX applications.
- QuickDraw GX does not work with non-QuickDraw GX printer drivers. If you want to print from non-QuickDraw GX applications with a driver such as the LaserWriter 8.x, you must first disable QuickDraw GX.

### N O T E



Refer to the on-line manual on the printer's CD-ROM for details on using the Phaser 350 GX driver.

- 1 Install the printer's software. Select **Easy Install** to automatically install all of the necessary software, or select **Phaser 350 GX Driver** in the **Custom Install** window.
- 2 Select **Chooser** from the **Apple** menu.

- 3 Click the **Phaser 350 GX** printer driver icon on the left side of the **Chooser**. A list appears with the printers available on your network. (If the printer driver icon does not appear, **Restart** your Macintosh, and repeat the printer driver installation procedure; also, check the cable connections on your computer and printer.)
- 4 Click on the **Zone** your printer is in. See your network administrator if you have questions.
- 5 In the **Connect via** field's pop-up menu, select your printer's communication method:
  - The **AppleTalk** option is the standard network connection.
  - The **Servers** option is used to select a shared desktop printer.

- 6 Click on your Phaser 350 printer in the list of printers on the right side of the **Chooser**.
- 7 Click the **Create** button to create a desktop printer. An icon of the printer appears on the desktop with the same name as the printer selected in the **Chooser**.
- 8 Close the **Chooser** by clicking its close box.

Source: 070-9682-00