

Setting up the Phaser 350 printer driver

The Phaser 350 driver is a Tektronix-modified version of Apple's LaserWriter 7.1.2 printer driver. Use the Phaser 350 driver if you are using System Software 6.0.7, or 7.0 and later.

- 1** Install the printer's software. Choose **Easy Install** to install all of the necessary software, or select **Phaser 350 Driver** in the **Custom Install** window.
- 2** Select **Chooser** from the **Apple** menu.
- 3** Click on the **Phaser 350** printer driver icon on the left side of the **Chooser**. A list appears with the printers you have connected to your Macintosh or printers that are available on a network. (If the printer driver icon does not appear, **Restart** your Macintosh, and repeat the printer driver installation procedure; also check the cable connections on your computer and printer.)
- 4** Click on the **Zone** your printer is in. See your network administrator if you have questions.

- 5 Click on your Phaser 350 printer in the list of printers on the right side of the **Chooser**.
- 6 Close the **Chooser** by clicking its close box.

Source: 070-9682-00