


# Adding ink

**Approximate time to complete: 1 minute**

The printer is shipped already loaded with Phaser 340/350 ColorStix solid-ink sticks. The front panel displays a message telling you when the printer is low on ink, giving you time to reorder. When the printer is out of ink, it displays an `Out of Ink` message. Add up to three ink sticks of each color to the printer before continuing to print. To avoid printing delays, immediately reorder and maintain a stock of each color ink stick.

- 1 Open the top cover.
- 2 Drop the appropriate color Phaser 340/350 ColorStix ink stick into the ink loading bin that appears low. Each ink stick is uniquely shaped to fit into the correct ink-loading bin.

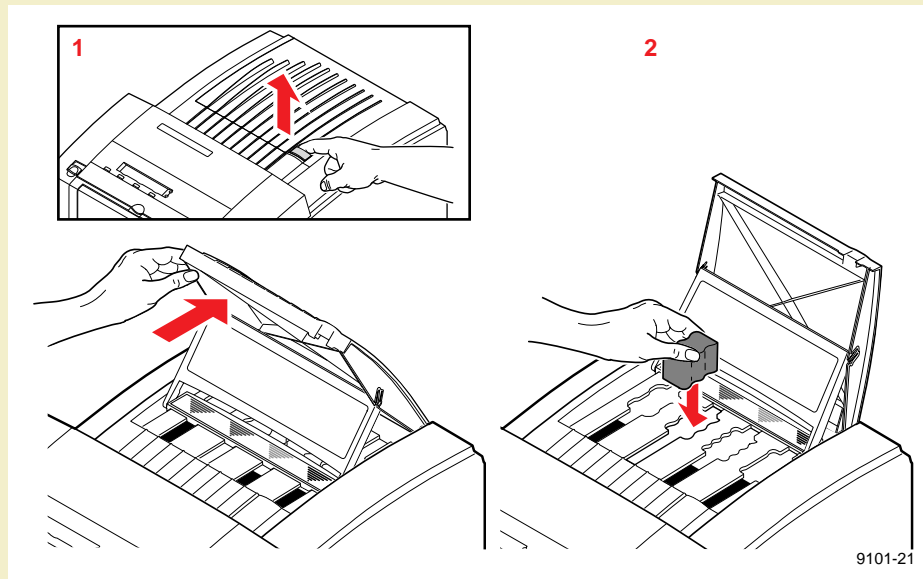

- 3 After loading the appropriate color ink stick, a front panel message directs you to close the top cover.

The print-quality setting and ink coverage per print affect the printer's ink consumption. For typical office document printing using the printer's **Fast Color** print-quality mode, you'll use one of each color ColorStix ink stick to print approximately 1250 pages. To reorder additional ink sticks, contact your local dealer or, in the United States, call Tektronix at **1-800-835-6100**.

Order Number	Description
016-1307-00	Phaser 340/350 ColorStix solid ink — 3 Black sticks
016-1308-00	Phaser 340/350 ColorStix solid ink — 3 Cyan sticks
016-1309-00	Phaser 340/350 ColorStix solid ink — 3 Magenta sticks
016-1310-00	Phaser 340/ 350 ColorStix solid ink — 3 Yellow sticks

Source: 070-9682-00 C5