

Printing the configuration page

A configuration page is similar to the printer's startup page, but it also provides details about each available port.

There are several ways to print the configuration page:

- [Printing the configuration page from the front panel](#)
- [Printing the configuration page with a downloadable utility file](#)
- [Printing the configuration page with PhaserLink software](#)

Printing the configuration page from the front panel

- 1 While the Ready message or the printer's name is displayed, press the **Menu** button. The printer displays the first item in the menu:

Help Pages
<---- ----> **Menu**

- 2 Press the **Menu** button to access the Help Pages. The following message appears:

Menu Map
<---- ----> **Print**

- 3 Press the left arrow (<----) or right arrow (---->) buttons until the following message appears:

Configuration Page
<---- ----> **Print**

- 4 Press the **Print** button to print a configuration page.

Printing the configuration page with a downloadable utility file

Use one of the following methods to download a utility file to the printer to print the configuration page:

- [Macintosh utility file: Configuration Page](#)
- [PC utility file: PRNTCNFG.PS](#)

Macintosh utility file: *Configuration Page*

NOTE



If you are using QuickDraw GX, you can use the Tektronix Phaser 350 GX driver to print a copy of the configuration page.

- 1 Install the utility files from the Phaser 350 printer's CD-ROM.
- 2 Select the appropriate printer in the **Chooser**.
- 3 Locate the *LaserWriter Utility* in the *PhaserTools* folder on your hard disk, and double-click its icon to start the application.
- 4 Choose **Download PostScript File** from the **Utilities** menu.
- 5 Select the *Configuration Page* file from the list, then click **Open**. (This file was installed in the *Printer Utilities* folder, inside the *PhaserTools* folder.)

- 6 At the prompt `Save PostScript output as:` you are asked for a file name for saving printer output. Use either the default name given in the edit box or type a new name.
- 7 Click **Save** to send the file to the printer.
- 8 If no output is returned by the printer, the *LaserWriter Utility* displays a dialog box; click **OK** to continue.

PC utility file: *PRNTCNFG.PS*

- 1 Locate the printer's utility files in the *PHSR350* directory on the Phaser 350 printer's CD-ROM. Copy the files to your hard disk, or use the files directly from the CD-ROM.
- 2 Use one of the following methods to send the *PRNTCNFG.PS* file to the printer:
 - **PC users:** Use the DOS **COPY** command to send the file to the printer. (Windows 3.1 users can also use the **Copy** command in the **File Manager**.)
 - **Workstation users:** Send the file to the printer as you would any PostScript file.

Printing the configuration page with PhaserLink software

Refer to the *PhaserShare Status Software User Manual* for information on using your World Wide Web browser to access the printer.

Source: 070-9682-00 CD