Using the Macintosh Installer

Use the installer application on the printer's CD-ROM or diskettes to install the printer's standard software. Then, continue with driver setup instructions depending on the driver you are using.

- 1 Use either the Phaser 350 printer's diskette or CD-ROM.
 - Floppy diskette: Insert the Printer Software for Macintosh diskette into your computer's disk drive.
 - **CD-ROM:** Insert the Phaser 350 printer's CD-ROM into your computer's CD-ROM drive.
- 2 Double-click the **Phaser 350 Installer** icon. Click **Continue** until the **Easy Install** window appears.

3 To install the items listed in the **Easy Install** window, click **Install**.

For details on each item, click Read Me.

To see a list of individual options, select **Custom Install** from the pull-down menu (available with the installer on the CD-ROM only).

4 Select individual items to install from the **Custom Install** window. Click the *I* buttons for information on each item. Click **Install** when you are ready to install the selected items.