

Replacing the maintenance tray

Approximate time to complete: 1 minute

The printer uses the maintenance tray, located inside the printer behind the front cover, prior to each printing and during cleaning operations. A front panel message tells you when the maintenance tray is low, allowing you to make a minimal number of prints before the tray is depleted. Install a new maintenance tray to continue printing. To avoid printing delays, keep an extra maintenance tray available for use in the printer.


N O T E



There is a 15-minute warm-up period required after replacing the maintenance tray.

To order a maintenance tray (Tektronix order number 436-0294-03), contact your local dealer or, in the United States, call Tektronix at **1-800-835-6100**.

- 1 Open the front cover.

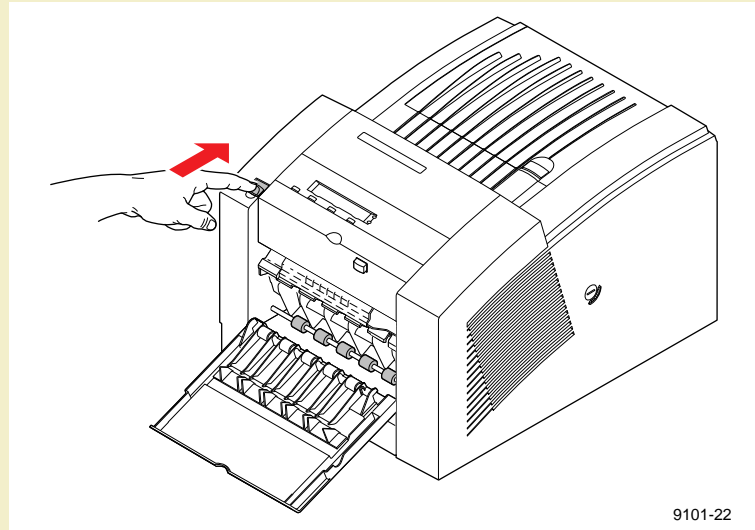

CAUTION


Some surfaces inside the printer may be hot. Be careful not to touch the areas marked with this caution icon:



- 2 When you open the front cover, the following message appears:

Caution Hot Surfaces
Replace Maintenance Tray

- 3 Grasp the maintenance tray by the front edge and lift up while sliding it out of the printer.

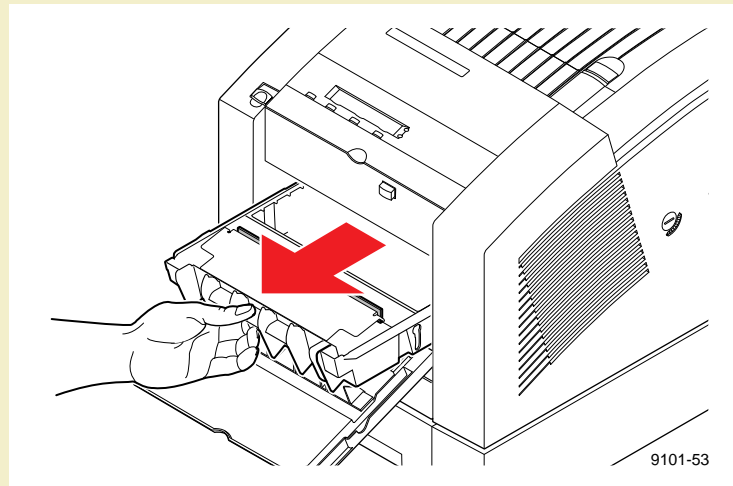

N O T E



Once the maintenance tray has been partially used, it leaks drum fluid if tipped. Never ship a partially used maintenance tray. Contact with the drum fluid poses no known health risk.

- 4 Install a new maintenance tray in the printer.

N O T E

Be sure to push on both sides of the maintenance tray to latch it firmly into the printer.

- 5 Close the front cover and wait for the printer to warm-up.
- 6 To prevent leaking, seal the used maintenance tray in the plastic bag from the new (replacement) maintenance tray. Treat the used maintenance tray as normal office waste.