

Enabling and disabling the startup page

You can choose to have a startup page print each time the printer is turned on or reset, or you can disable the startup page.

You can enable and disable printing of the startup page in several ways:

- [Enabling and disabling the startup page from the front panel](#)
- [Enabling and disabling the startup page with a downloadable utility file](#)
- [Enabling and disabling the startup page with PhaserLink software](#)

Enabling and disabling the startup page from the front panel

- 1 While the Ready message is displayed, press the **Menu** button. The printer displays the first item in the setup menu:

```
Help Pages
<----      ---->      Menu
```

- 2 Using the left arrow (<----) or right arrow (---->) buttons, scroll through the selections until the following message appears:


```
Printer Defaults
<----      ---->      Menu
```

- 3 Press the **Menu** button to access the printer defaults settings.
- 4 Using the left arrow (<----) or right arrow (---->) buttons, scroll through the selections until the following message appears:

```
Startup Page
<----      ---->      Menu
```

- 5 Press the **Menu** button to access the startup page settings.
- 6 Press the right arrow (---->) button once for the following message:

Startup Page:Disabled
 <---- ----> **OK**

- 7 Press the **OK** button to disable printing of the startup page.
- 8 To return to the top level of the menu, press the  button until the printer displays the Ready message.

Enabling and disabling the startup page with a downloadable utility file

Use one of the following methods to download a utility file to the printer to enable or disable the startup page:

- [Macintosh utility file: LaserWriter Utility](#)
- [PC utility file: STARTPG.PS/NOSTRTPG.PS](#)

Macintosh utility file: *LaserWriter Utility*

- 1 Install the utility files from the Phaser 350 printer's CD-ROM.
- 2 Select the appropriate printer in the **Chooser**.
- 3 Locate the *LaserWriter Utility* in the *PhaserTools* folder on your hard disk, and double-click its icon to start the application.
- 4 Choose **Set Startup Page** from the **Utilities** menu.
- 5 Select either the **on** or **off** button, then click **OK**.

PC utility file: *STARTPG.PS/NOSTRTPG.PS*

- 1 Locate the printer's utility files in the *PHSR350* directory on the Phaser 350 printer's CD-ROM. Copy the files to your hard disk, or use the files directly from the CD-ROM.
- 2 Select one of the following files:
 - Use the *STARTPG.PS* file to enable printing of the printer's startup page.
 - Use the *NOSTRTPG.PS* file to disable the printer's startup page.
- 3 Use one of the following methods to send the desired file to the printer:
 - **PC users:** Use the DOS **COPY** command to send the file to the printer. (Windows 3.1 users can also use the **Copy** command in the **File Manager**.)
 - **Workstation users:** Send a file to the printer as you would any PostScript file.

Enabling and disabling the startup page with PhaserLink software

Refer to the *PhaserShare Status Software User Manual* for information on using your World Wide Web browser to access the printer.