

Printing the startup page

By default, printing of the startup page is enabled on power up. However, you can print the startup page anytime you need information on the number of pages that have been printed, the amount of installed memory, the number of fonts in memory, and installed interface ports.

Use the following methods to print a copy of the printer's startup page without turning the printer off and on.

NOTE



If the printer detects a non-fatal failure, it automatically prints a startup page containing diagnostic information regardless of the startup page setting.

There are several ways to print the startup page:

- [Printing the startup page from the front panel](#)
- [Printing the startup page with a downloadable utility file](#)
- [Printing the startup page with PhaserLink software](#)

Printing the startup page from the front panel

- 1 While the Ready message is displayed, press the **Menu** button. The printer displays the first item in the menu:

```
Help Pages
<---->      Menu
```

- 2 Press the **Menu** button to access the Help Pages. The following message appears:

```
Menu Map
<---->      Print
```

- 3 Press the left arrow (<----) or right arrow (---->) buttons until the following message appears:

```
Help Pages:Startup Page
<---->      Print
```

- 4 Press the **Print** button to print a startup page.

Printing the startup page with a downloadable utility file

Use one of the following methods to download a utility file to the printer to print the startup page:

- [Macintosh utility file: Print Start Page](#)
- [PC utility file: PRNTSTPG.PS](#)

Macintosh utility file: *Print Start Page*

NOTE



If you are using QuickDraw GX, you can use the Tektronix Phaser 350 GX driver to print a copy of the printer's startup page.

- 1 Install the utility files from the Phaser 350 printer's CD-ROM.
- 2 Select the appropriate printer in the **Chooser**.
- 3 Locate the *LaserWriter Utility* in the *PhaserTools* folder on your hard disk, and double-click its icon to start the application.
- 4 Choose **Download PostScript File** from the **Utilities** menu.
- 5 Select the *Print Start Page* file from the list, then click **Open**. (This file was installed in the *Printer Utilities* folder, inside the *PhaserTools* folder.)

- 6 At the prompt `Save PostScript output as:` you are asked for a file name for saving printer output. Use either the default name given in the edit box or type a new name.
- 7 Click **Save** to send the file to the printer.
- 8 If no output is returned by the printer, the *LaserWriter Utility* displays a dialog box; click **OK** to continue.

PC utility file: *PRNTSTPG.PS*

- 1 Locate the printer's utility files in the *PHSR350* directory on the Phaser 350 printer's CD-ROM. Copy the files to your hard disk, or use the files directly from the CD-ROM.
- 2 Use one of the following methods to send the *PRNTSTPG.PS* file to the printer:
 - **PC users:** Use the DOS **COPY** command to send the file to the printer. (Windows 3.1 users can also use the **Copy** command in the **File Manager**.)
 - **Workstation users:** Send the file to the printer as you would any PostScript file.

Printing the startup page with PhaserLink software

Refer to the *PhaserShare Status Software User Manual* for information on using your World Wide Web browser to access the printer.