

Printing the configuration page

The configuration page contains a variety of information especially useful for network installation and troubleshooting.

There are two ways to print the configuration page:

■ Use the printer's front panel menu.

1. While the Ready message is displayed, press the **Menu** button. The printer displays the first item in the menu:

```
Help Pages
<---- -> Menu
```

2. Press the **Menu** button to access the Help Pages. The following message appears:

```
Test Print
<---- -> Print
```

3. Press the left arrow (<---) or right arrow (--->) buttons until the following message appears:

```
Configuration Page
<--- ---> Print
```

4. Press the **Print** button to print a configuration page.
5. Return to the top level of the menu by pressing the  button until the printer displays the Ready message.

■ Send the PostScript language file to the printer.

See the *Phaser Share User Manual* or the *Phaser 540 Drivers and Utilities Printing Reference* for more information on the configuration page.