

Printed colors are not what you expected

- Select another **Color Correction** option in the driver and print your image again.
- If you are not using a Tektronix driver and are sharing the printer with other users on a network, another user may have changed the printer's color adjustment setting.
- If you use the driver's **Use Printer Setting** option and printed colors are not what you expected, check the selection in the TekColor Corrections menu on the printer's front panel. These settings change the printer's default color correction.
- If PANTONE Colors are not printing as expected, make sure you are printing without any color corrections as outlined below.

If you have questions about PANTONE Color matching, refer to the HAL article on PANTONE Colors.

- From the Tektronix Macintosh driver, select the **None** option in the **TekColor Options** dialog box.
- From the Tektronix Windows driver, select the **None** option in the **Tektronix Printer Features** dialog box.
- If you are not using a Tektronix driver, select **None** in the TekColor Correction menu on the printer's front panel, or download the *No Color Correction (NOCORECT.PS)* utility file to the printer.