

Enabling and disabling the startup page

You can enable and disable printing of the startup page in three ways:

- On a PC, send a PostScript language utility file to the printer.
- On a Macintosh, use the *LaserWriter utility*.
- Through the printer's front panel, according to the following instructions:
 1. While the Ready message is displayed, press the **Menu** button. The printer displays the first item in the setup menu:

```
Help Pages
<---- -> Menu
```

2. Using the left arrow (<---) or right arrow (--->) buttons, scroll through the selections until the following message appears:

```
Printer Defaults
<--- ---> Menu
```

3. Press the **Menu** button to access the printer defaults settings.
4. Using the left arrow (<---) or right arrow (--->) buttons, scroll through the selections until the following message appears:

```
Startup Page
<--- ---> Menu
```

5. Press the **Menu** button to access the startup page settings.
6. Press the right arrow (--->) button once for the following message:

```
Startup Page:disabled
<--- ---> OK
```

7. Press the **OK** button to disable printing of the startup page.
8. To return to the top level of the menu, press the  button until the printer displays the Ready message.