

Installing a Tektronix printer driver for Macintosh

System requirements

Note *You must have an optional Phaser Share Card installed in the printer before installing the driver.*

The Phaser 540 printer driver for the Macintosh requires the following hardware and software:

- An Apple Macintosh II computer (or later)
- At least 4 Mbytes of memory
- System Software version 6.0.7, or 7.0 and higher

Installing the driver

If the printer is shared on a network, install the same version of the Tektronix driver on all Macintosh computers connected to the network.

1. Make sure your Macintosh is powered up with System Software version 6.0.7, or 7.0 or higher, installed.
2. Insert the Macintosh Driver and Printer Utilities diskette into the disk drive.
3. Drag the **Phaser 540** driver icon from the diskette to the **closed System Folder** icon on your Macintosh hard disk.
 - System 7.0 and higher, at the alert message, click **OK** to automatically install the driver in the *Extensions* folder.
 - System 6.0.7, the driver is installed in the *System Folder*.

4. If you are using system 6.0.7, you need to install two files in the *Old System Items* folder:

- Backgrounder V1.3
- *PrintMonitor V7.0*

Drag these files to the closed **System Folder** icon on your Macintosh hard disk.

5. If you installed the additional software in Step 4, you need to restart your Macintosh to activate that software.
6. Store the printer driver diskette in a safe place.

Selecting the printer in the Chooser

1. Select **Chooser** from the **Apple** menu.
2. Click the **Phaser 540** printer driver icon located on the left-hand side of the **Chooser**.

A list appears with the printers you have connected to your Macintosh, or printers that are available on a network. (If the printer driver icon does not appear, **Restart** your Macintosh, and repeat the printer driver installation procedure; also check the cable connections on your computer and printer.)

3. Click on the Tektronix Phaser 540 printer you want to print to. The list of Tektronix printers is located on the right side of the **Chooser**.
4. Close the **Chooser** by clicking its close box.