

Using the TEKTRONIX printer driver's options

Use the Page Setup, Print, and TekColor Options dialog boxes to select printing options. Refer to the *Phaser 540 Drivers and Utilities Printing Reference* for instructions on performing common tasks with the driver.

Applications that use their own drivers

Some Macintosh applications, such as Aldus PageMaker 5.x, do not recognize settings made using the Tektronix printer driver. For PageMaker 5.x, use the LaserWriter 8.x printer driver configured with the version 4.x TKPH5401.PPD printer description file. The best way to obtain the TekColor color corrections with this configuration is to use one of the following:

- Color correction utility files
- Printer's front panel

Extensions to the Print dialog box

Some applications add their own extensions to the Print dialog box. Refer to the application's documentation for information on extra options.

Making selections in the Page Setup dialog box

Choose Page Setup from the File menu to open the Page Setup dialog box. Make printer selections in the Page Setup dialog box as desired. Most options are standard LaserWriter driver options.

When selecting a paper size, use the pop-up menu.



Making selections in the Print dialog box


Choose Print from the File menu to open the Print dialog box. Make printer selections in the Print dialog box as desired. Most options are standard LaserWriter driver options.

Click the TekColor button to see the TekColor Options dialog box.



Making selections in the TekColor Options dialog box

Click the TekColor button in the Print dialog box to open the TekColor Options dialog box. Make printer selections in the fields described in the following table.

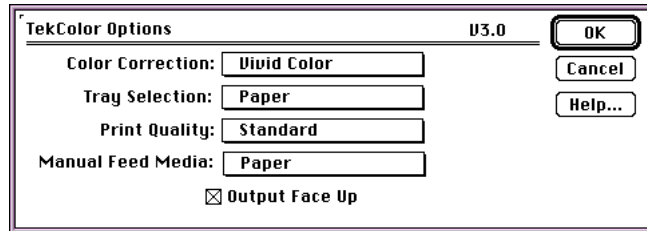

TekColor Options dialog box options

Dialog box options	Option description
Color Correction	Select one of the following options: <ul style="list-style-type: none">■ None■ Vivid Color■ Simulate Display■ SWOP Press■ Euroscale Press■ Commercial Press■ Monochrome■ Use Printer Setting
Tray Selection	Select one of the following options when Paper Cassette is selected as the Paper Source in the Print dialog box: <ul style="list-style-type: none">■ Upper■ Middle■ Lower■ Paper■ Transparency
Print Quality	Select one of the following options: <ul style="list-style-type: none">■ Fast■ Standard■ Enhanced
Manual Feed Media	Select one of the following options when Manual Feed is selected as the Paper Source in the Print dialog box: <ul style="list-style-type: none">■ Paper■ Transparency
Output Face Up	Check this box to stack prints face up in the output tray. Uncheck this box to stack prints face down in the output tray.