


Installing the fuser

1. Open the front door and the right side door to install the fuser.

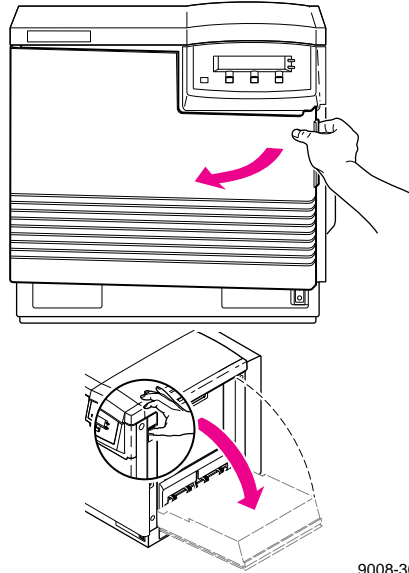

9008-30

2. Remove the fuser from its packaging.


Note *After factory testing, a small amount of residual oil may be absorbed by the fuser's protective wrapping paper; this does not affect operation.*

Save all packing material in case you need to return the fuser for repair or replacement.


Caution *The fuser weighs approximately 4.1 kg (9 lbs.); take care when handling it.*

Always keep the fuser in an upright position.

3. Slide the fuser into the printer.

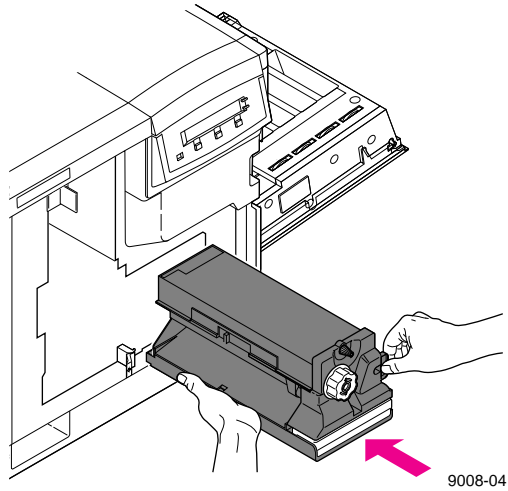

4. Lock the fuser by turning the **small blue screw** *clockwise* several turns.

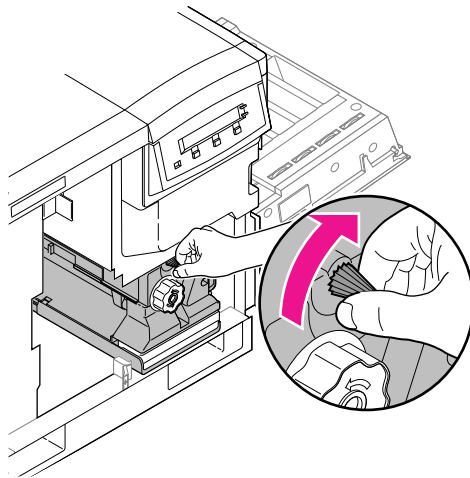

5. Close the right side door and the front door.