


How to tell which PhaserShare card is installed in your printer

If a PhaserShare card is installed in your printer, one of the interfaces shown below is visible on the back of the printer.

1. Ethernet interface
2. LocalTalk/Serial interface
3. Token Ring Interface

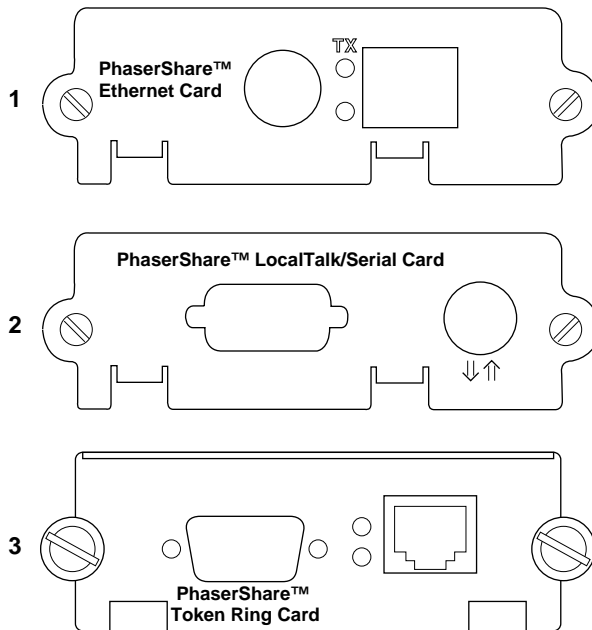

9109-4A

If a PhaserShare card is installed, the printer's startup page reports the available connections in the **Ports** field.

If a PhaserShare card is installed, the printer's configuration page reports the type of card installed in the **PhaserShare™** field.

Refer to your printer's user manual for more information on the startup page. For more information on the configuration page, see the web topic "Your printer's configuration page."