

How to tell which protocols are enabled in your printer

All protocols can be enabled and disabled. However, if you are using TCP/IP, the protocol must first be authorized by sending the printer an authorization code (see the web topic “TCP-IP authorization code”). Once TCP/IP is authorized, it can be enabled or disabled like the other protocols.

The configuration page reports which protocols are enabled. If a protocol is enabled, the field for that protocol lists the current parameters. If the protocol is disabled, the field for that protocol contains an entry reading “Disabled.”