

Introduction

The PhaserShare Token Ring port conforms to the IEEE 802.5 standard. With the PhaserShare Token Ring card, you can connect the printer directly to a Token Ring network using shielded twisted pair (STP; IBM Type 1) or unshielded twisted pair (UTP; IBM Type 3) cables. Contact your dealer to obtain adapters and cables.

When a PhaserShare card is purchased initially with the printer, it is installed at the factory. When a PhaserShare card is purchased later as an upgrade kit, follow the instructions in Chapter 3 of the User Manual for details installing the card.

Note *Make sure that the printer is turned **off** before making any Token Ring connections.*