

Using AppleTalk Phase 2

If you connect the printer using EtherTalk or TokenTalk, your computer must have AppleTalk Phase 2 software. If you connect the printer using LocalTalk, AppleTalk Phase 2 is not required (Phase 1 will work).

Source 070-9109-01 C7