## Finding your printer's name in the Chooser

- 1. Select **Chooser** from the **Apple** menu.
- 2. In the upper-left corner of the Chooser, find the printer driver icon for your Tektronix printer. (If the printer driver icon does not appear in the Chooser, you need to install the printer driver.) Click on the printer driver icon for your Tektronix printer.
- Select the proper zone in the list of zones in the lower-left portion of the Chooser.

Note The printer's default zone is listed in the **EtherTalk** or **TokenTalk** field on the configuration page.

4. A list of printers appears in the right portion of the Chooser. Find the name of your printer in the list. The printer's default name is listed on the configuration page. If the name does not appear, check the cable connection between your printer and the network.

Source 070-9109-01 C7