

Bindery emulation required

The PhaserShare NetWare interface requires a network that supports bindery emulation. When using the Tektronix network utilities or the Advanced Configuration Tool, in a NetWare 4.x environment, be sure to log in using a bindery connection. Use the **/B** option as shown here.

LOGIN /B *file-server-name/user-name*

Note *BIND.VLM must be loaded to get a bindery connection. To determine if it is loaded, enter the following command from the **/VLM** directory:*

VLM /D

This displays a list on your screen showing all loaded VLM's. Refer to your NetWare documentation for details on installing *BIND.VLM* if it is not loaded.