

# Printer configuration using PCONSOLE

## Adding a print server

1. Log in with supervisor privileges.
2. Enter **PCONSOLE** by typing:

**PCONSOLE**

3. From the **Available Options** menu, select **Print Server Information (Print Servers in NetWare 4.0)**. The **Print Servers** menu is displayed.
4. Press the **Insert** key, then enter the printer's default print server name and press **Enter**. The default print server name is in the following syntax:

**TEKXXXXXX**

where **XXXXXX** are the last six hex digits of the printer's Printer ID.

The printer's print server name is listed on the configuration page.

When you have entered the default print server's name, press **Enter**. The new name is added to the **Print Servers** menu.

5. Press **Escape** to return to the **Available Options Menu**.

## Selecting queues for the printer

1. From the **Available Options** menu, select **Print Queue Information**. A list of queues is displayed.
2. Insert a new queue or select an existing queue.
  - To insert a new queue, press **Insert**, type the queue name, and press **Enter**. Select the new queue and press **Enter**. When the **Print Queue Information** menu is displayed, go on to Step 3.
  - To use an existing queue, select the queue. When the **Print Queue Information** menu is displayed, go on to Step 3.
3. Select **Queue Servers (Print Servers in NetWare 4.0)** from the **Print Queue Information** menu.
4. Press the **Insert** key to display the list of **Queue Server Candidates**.
5. Select the server you created in Step 4 under the topic [“Adding a print server”](#) and press **Enter**.
6. Use the **Escape** key to exit the menus and return to the **Available Options Menu**.
7. Press **Escape** to exit **PCONSOLE**.
8. Turn the printer on or reset it.

**Note**     *The Advanced Configuration Tool creates a configuration file. The printer uses the information in that configuration file rather than the configuration file set up by PCONSOLE. Use the Advanced Configuration Tool to set the printer's configuration server to "" (an empty string). Then delete the configuration file created by the Advanced Configuration Tool before using PCONSOLE to change the configuration.*

## Modifying other print server parameters (optional)

You can continue to use **PCONSOLE** to modify the following print server parameters (in the **Printer Server Information** menu):

- Full Name
- Print Server Operators

Use the Advanced Configuration Tool to modify other print server parameters. See the web topic “Printer configuration using the Advanced Configuration Tool” for more information.

**Note** *Do not use the **Change Password** function in **PCONSOLE** to set a password for the printer. If you use **Change Password** in **PCONSOLE**, the password is not sent to the printer. Use the Advanced Configuration Tool to set the printer password.*