

Windows NT setup

The PhaserShare TCP/IP interface is compatible with Windows NT 3.5. Before you begin, make sure that the printer is connected to the network.

Assign the printer's IP address

To assign the printer's IP address, you can download a PostScript utility file from the printer's network utilities diskettes. For more information on configuration using the utility file, see the web topic "TCP/IP networks without UNIX hosts."

Create a TCP/IP printer

Use Print Manager to create a TCP/IP printer just as you would to create any printer on a Windows NT network. The computer where you create the TCP/IP printer must have TCP/IP installed and configured with the TCP/IP Network Printing Support option. Follow the instructions provided with Windows NT for setting up Windows NT for TCP/IP printing and creating a TCP/IP printer.

If your Windows NT installation is set up to use the file *SYSTEM32\DRIVERS\ETC\HOSTS*, you need to add to this file the name you are using for your printer and an IP address.