


# Ethernet connections and indicators

The PhaserShare Ethernet card has the following connections and indicators on the rear panel:

1. Thin coax (10BASE2) connector.
2. TX indicator (yellow); blinks while interface is transmitting.
3. RX Link indicator (green). For a thin coax connection, this indicator is normally off and blinks when the interface is receiving. For a twisted pair connection, this indicator is normally on and blinks when the interface is receiving.
4. Twisted pair (10BASE-T) connector.

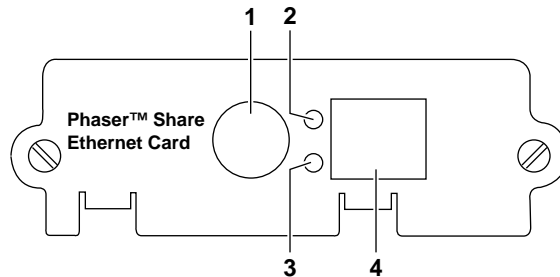

9109-5