


Making transparencies

Follow these guidelines when you make transparencies:

- Use only Tektronix transparencies.
- When using the transparency tray (1), load transparencies with the printable side *down* (the notched end is placed closest to the load level label inside the transparency tray).
- When using manual feed (2), insert the side with the notched end into the printer first, with the notched corner closest to the front of the printer.

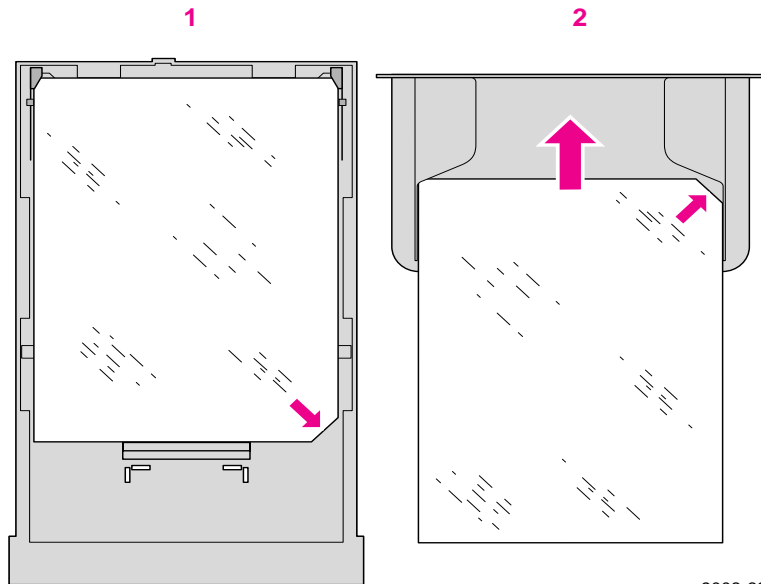

9008-68

Note *Do not re-use transparencies that have been fed through the printer once, for example, after jams or if the transparency is ejected without being printed; you may damage the printer.*

Also, do not print double-sided. Although your output may look acceptable, you may shorten the life of the imaging unit.