


Repacking your printer

1. Turn off the printer; remove the power cord.
2. Remove the media tray(s). Repack them for shipping or storage in their original shipping boxes.

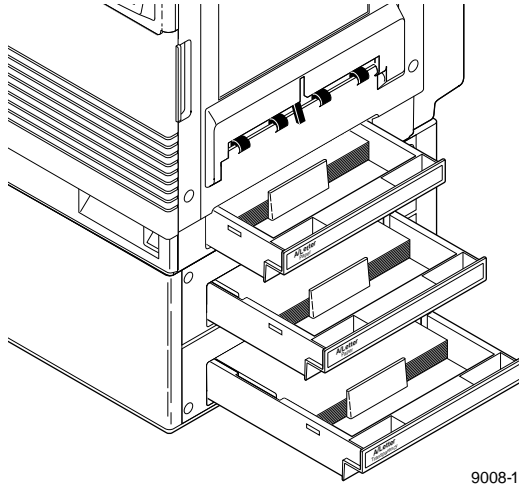


9008-16

3. With the front and right side doors open, remove the fuser and imaging unit; immediately repack them for shipping or storage in their original shipping boxes.

Caution *The imaging unit is extremely light sensitive; keep its light exposure to a minimum (less than 45 seconds). Also, keep it upright to avoid spilling any waste toner.*


4. Remove the four toner cartridges; replace the protective cover for each cartridge; repack them for shipping or storage in their original shipping boxes.
5. Carefully remove the waste bin; empty the waste toner into a plastic bag that you seal and dispose of as normal office waste; replace the waste bin in the printer.

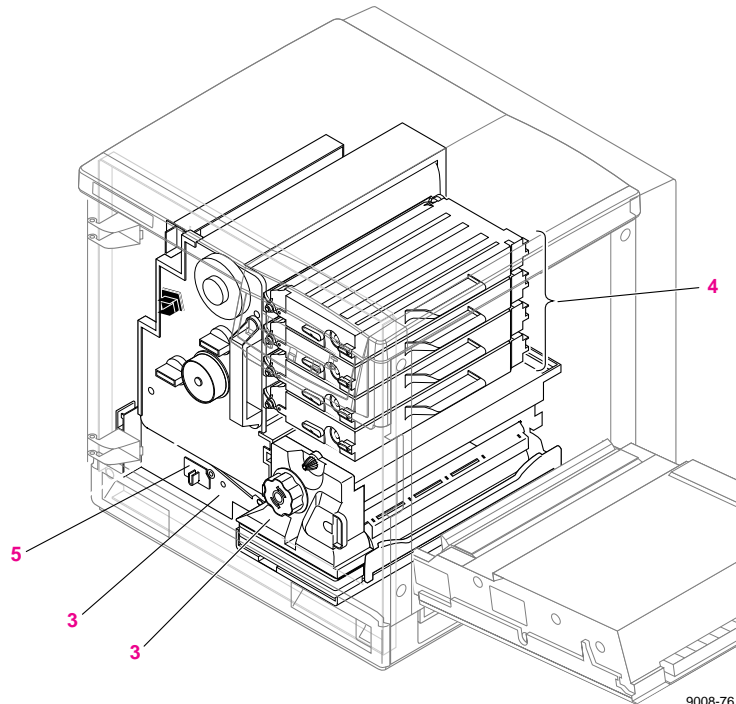

6. Wipe off any loose toner in and around the printer.
7. Close all doors and secure them with adhesive tape. If you don't have a Lower Tray Assembly, read ahead to Step 9.
8. **If you have a Lower Tray Assembly:**
 - a. Lift the printer up and away from the Lower Tray Assembly.

Warning *The printer weighs about 39 kg. (85 lbs.) and the Lower Tray Assembly weighs 14 kg (31 lbs.). Observe standard precautions for lifting heavy objects.*

- b. Repack the Lower Tray Assembly in its original shipping box.

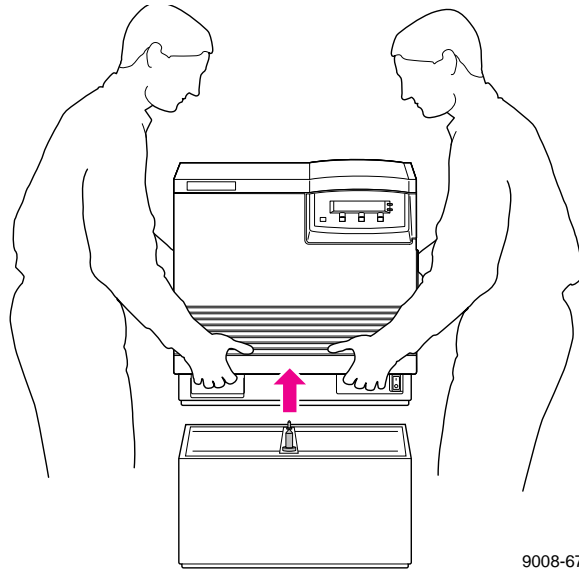


9008-67

9. Repack any other accessories in the original Tektronix shipping box.

10. Repack the printer in the original Tektronix shipping box. Make sure that you keep the printer level when moving.

Note *To keep your warranty valid, you must first remove the fuser, toner cartridges, and imaging unit, then ship the printer in its Tektronix shipping box with the appropriate packing materials. Call Tektronix at **1-800-835-6100** or call your nearest Tektronix dealer if you need a replacement box. Also, if you are returning the printer for service, call Tektronix or your nearest Tektronix dealer for a return authorization number.*

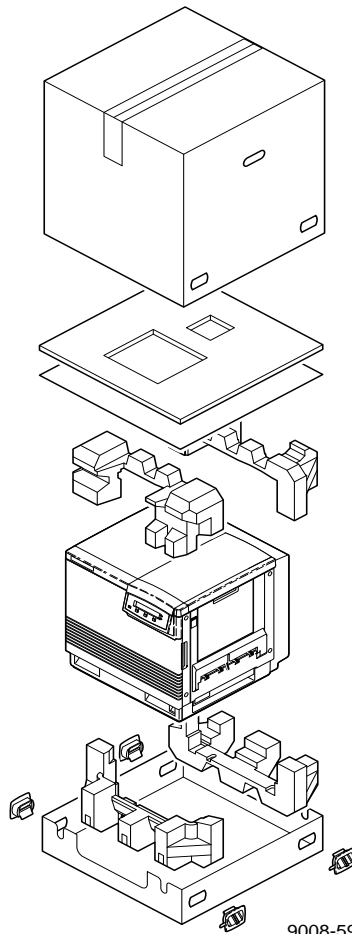

9008-59